


Rooflite M


MORE LIGHT FOR A BETTER LIFE!

INSTALLATION INSTRUCTIONS:

***1** Install the last sandwich panel before installing the multiwall corrugated polycarbonate sheet in order to realize the skylight.

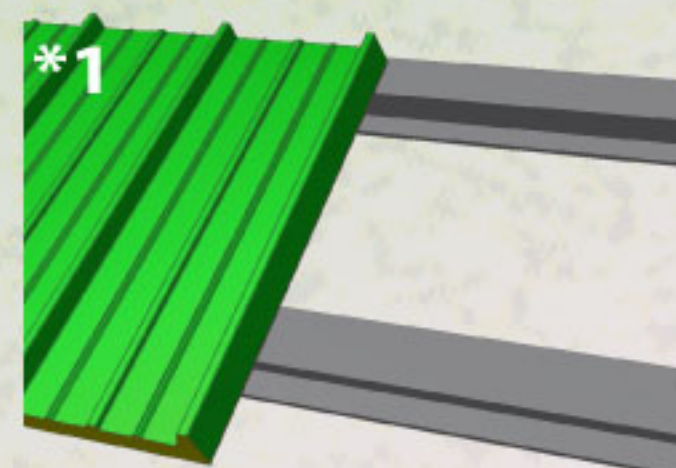


***2** Install the next sandwich panel with a distance of 1000 mm between fixing points and before installing the multiwall corrugated sheet, fix on purlin towards eaves (with double-sided adhesive tape or silicone) the PE spacer.

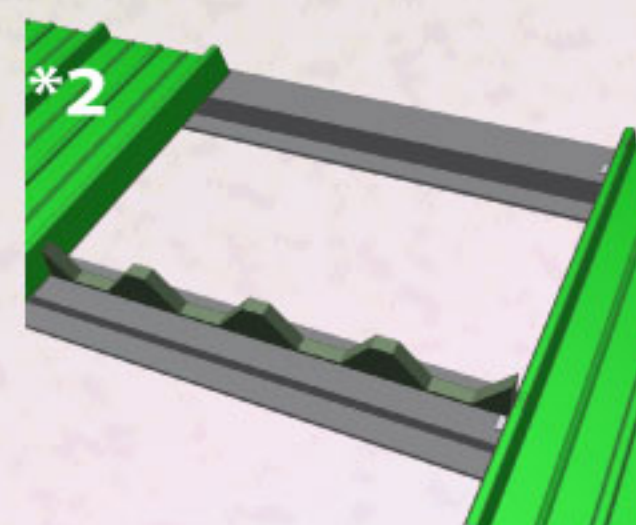


***3** Install, under the empty greca of sandwich panel on each purlin, our reinforced wing (or flashing support to be provided by the client) fixing it on purlin with a suitable screw (for wood, metal, ...)



***4** Install the multiwall corrugated polycarbonate sheet checking that the side wings fit correctly on greca of sandwich panel.

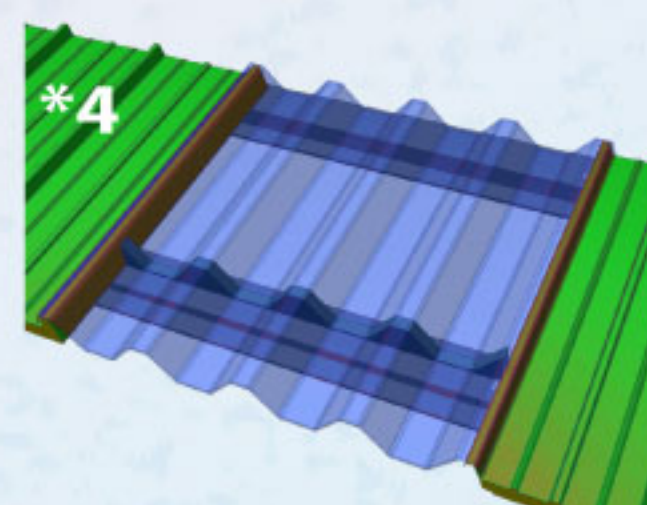


***5** Go on fixing the multiwall corrugated sheet on sandwich panels with suitable screws on purlins. If you use our reinforced wings check that they are correctly placed under fixing screws. Place the second half of PE spacer on the top, where the half ridge profile will be installed.

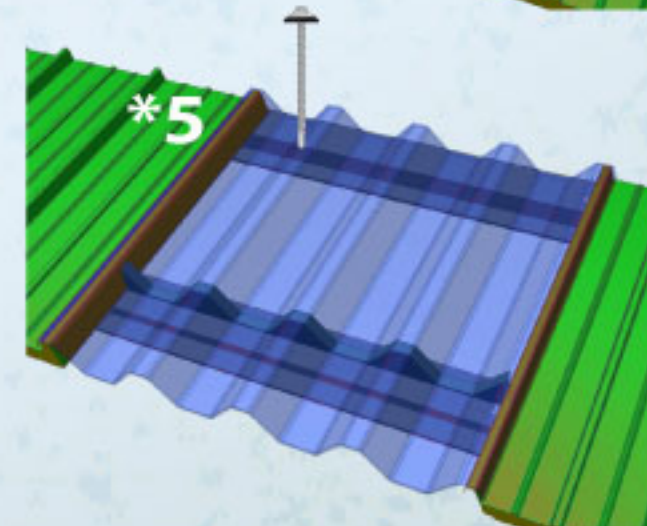

***6** Install the half ridge profile checking that the PE spacer is correctly placed under it.

***7** Go on with installation of half ridge for sandwich panels and repeat the installation process when another multiwall corrugated sheet is required.

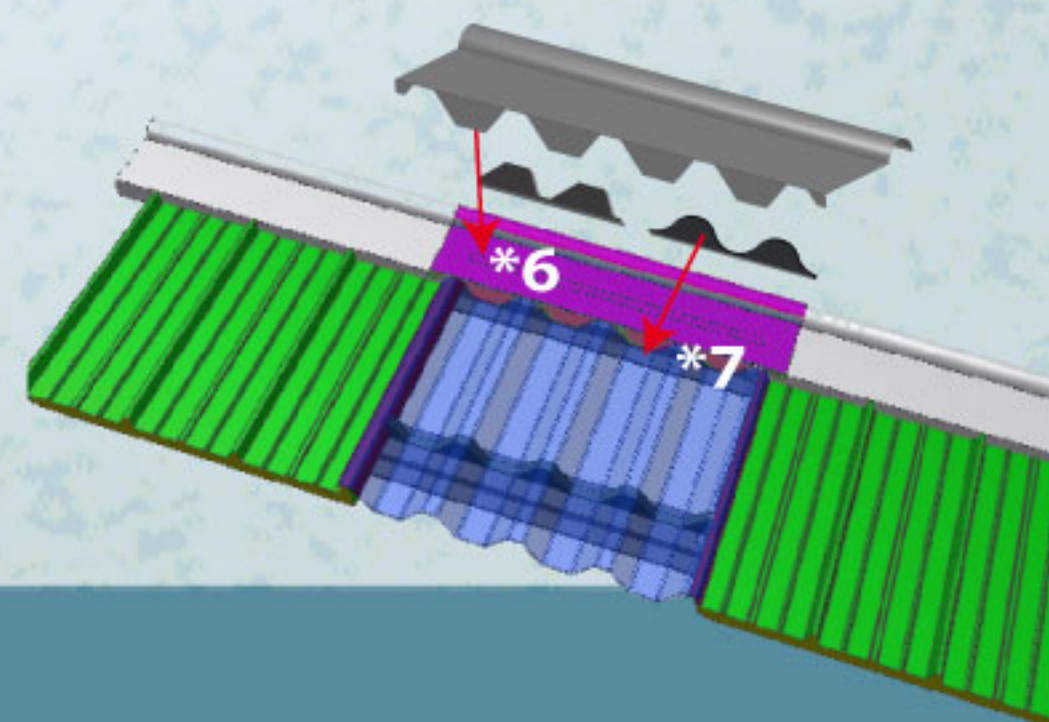

R
o
o
f
l
i
t
e

M
u
l
t
i
w
a
l
l